
System Type:

yber Power[®]

ENCLOSURE INSTALLATION

Carefully follow these instructions during installation of this device:

- 1.) Carry out the installation in a safe area that is free of excessive dust and has adequate airflow
- 2.) Screws must be appropriate for total weight of the UPS and the mounting surface material.
- 3.) Do not operate the UPS where the temperature and humidity are outside the specified limits.

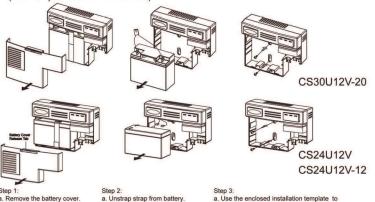

- a. Unstrap strap from battery. b. Slide battery off of the
- c. Disconnect battery cable connector at chassis end


- mark an installation location for the unit

- Mount the unit on the wall with 2 mounting screws into the keyhole slots.
 Tighten the screws to secure the units.
 Connect the battery connector and replace the battery back

BATTERY REPLACEMENT

a. Remove the battery cover

This battery is hot-swappable. As long as utility power is on , you may leave the UPS and connected equipment on while replacing a new battery.

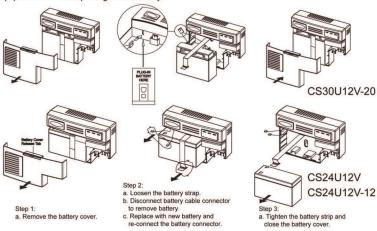

OPERATION

Connect: Equipment and Power

Step1. Plug the UPS power cord into the utility power cord inlet

Step2. Plug the UPS power cord into the wall outlet.



The UPS battery charges when it is connected to utility power. The battery charges fully during the first 24 hours of normal operation. Do not expect full battery run capability during this initial charge period.

COLD START

The cold start feature is for applying power to the UPS and connected equipment when the UPS is off and there is no utility power. Before using the cold start feature, please make sure the battery is charged. To start the cold start feature, press the recessed cold start button with a small pointed



Once the battery is disconnected, the connected equipment is not protected from power





Deliver spent batteries to a recycling facility or ship to the manufacturer in the replacement battery packing material.

WARNING INDICATOR

Indicator	Color	Condition	
4	Green	UPS is on utility power.	
AC	Yellow	UPS is on battery power.	
===	Green	DC output power is provided by the battery or	
OUTPUT		utility power.	
BATTERY	Red	The battery is not connected or the battery needs to be replaced.	

Front Panel

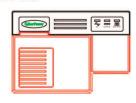

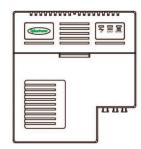

CS24U12V / CS24U12V-12

CS30U12V-20







Visual Indicators

Battery Color: Red Service or replace battery. Or Battery is not installed in NXG

Vision.

Mute Color: Yellow Flashing: Audible

Alarm silenced for 24 hrs. Solid: Audible Alarm Silence Until manually enable.

System Status Color: Green NXG-Vision is receiving

AC power load to operate under normal

conditions.



State	Visual Indicator	Audible Indicator	Description
Normal	System Status Indication On		Operating under normal AC line power load and conditions. Charges battery. Battery is connected and in good condition.
On Battery	DC Indicator On		AC line power failure or AC cord disconnection. NXG-Vision is being supplied with battery power.
Replace Battery	Battery Indicator On	1/2 second audible indicator every 15 minutes	Replace faulty or end of life battery.
Battery Missing	Battery Indicator On		NXG-Vision is operating on AC line power only without available standby power for outage scenario. When battery is removed from unit, battery indicator will illuminate after 5 seconds.
Low Battery	DC Indicator Flashes	1/2 second audible indicator 4 times per minute	Battery has reached equal to or less than 30% remaning Capacity on battery discarge.



